

## Instructions for Backwashing

- 1) With filter running in normal "Filter" setting turn your pump off
- 2) Turn the top valve handle clockwise to the Backwash setting
- 3) Stretch your backwash hose out away from the pool
- 4) Turn your pump back on
- 5) Let it run until the water coming out of your backwash hose looks clear
- 6) Turn your pump back off
- 7) Turn the top valve handle clockwise to rinse
- 8) Turn your pump back on
- 9) Watch for the water to clear again
- 10) After the water has cleared turn your pump off
- 11) Turn the handle over to filter
- 12) Turn your pump back on and you are finished

You will need to repeat this either once a week or whenever your filter pressure gets between seven and ten pound higher than normal and every time you vacuum